



MANAGER PROGRAMMING

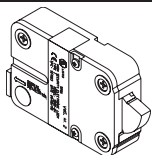

4200 Swingbolt Lock

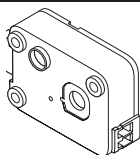

3740-2 Deadbolt Lock

FEATURES

MANAGER COMBINATION (Factory set to 1-2-3-4-5-6)

- Add/Remove User
- Enable/Disable User

USER COMBINATION

- Open Lock
- Change Combination

WRONG TRY PENALTY

- Four (4) consecutive invalid combinations initiates five (5) minute delay period.

LOW BATTERY WARNING

- Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

AUDIO AND VISUAL SIGNAL

- Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.

SUGGESTED KEYPADS:



3000 Entry
(Swingbolt
Only)



3710 Entry
(Swingbolt
Only)



3715 Entry
(Swingbolt
Only)



3750 Entry



3190 Privat^{II}
(Optional)

OPENING THE LOCK

1. Enter valid six (6) digit combination. The lock will signal a valid combination entry with a double signal.
 2. Within four (4) seconds, turn the keypad to the open position (clock-wise) if using a deadbolt style lock, or turn the handle to the open position if using a swingbolt style lock.
 3. Pull door open.
- **Invalid Combination Entry** - Lock will signal three (3) times.
 - **Security Considerations** - On safes using more than one lock the swingbolt must lock first.

CHANGING MANAGER AND USER COMBINATIONS

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter "zero" six times.
 2. Enter your existing six (6) digit combination one time.
 3. Enter your **new** six (6) digit combination two times.
 4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.
 5. Test lock operation several times before closing the door.
- **Valid Combination** - Double signal after valid six (6) digit combination is entered.
 - **Invalid Combination** - Triple signal indicates the old combination is still valid.
- CAUTION: When selecting a combination do not use birthday or other predictable data that could give correlation between the user and combination. Keep the combination secret.**

ADD USER (MANAGER ONLY)

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter the Manager combination and **hold down last digit of combination** until the lock signals with two sets of double beeps.
2. **Press 1.** Lock signals twice.
3. Enter user combination twice. The lock signals twice after each valid entry.
4. If a mistake is made wait thirty (30) seconds and repeat steps **1 - 3.**
 - Valid Combination Entry - Double signal after valid six (6) digit combination is entered.
 - Invalid Combination Entry - Triple signal indicates the old combination is still valid.

DISABLE USER (MANAGER ONLY)

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter the Manager combination and **hold down last digit of combination** until the lock signals with two sets of double beeps.
2. **Press 2.** Lock signals once.
3. User is temporarily disabled. (User combination is saved and will be valid if reinstated.)
4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.

REINSTATE USER (MANAGER ONLY)

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter the Manager combination and **hold down last digit of combination** until the lock signals with two sets of double beeps.
2. **Press 1.** Lock signals once.
3. User is reinstated.
4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.

DELETE USER (MANAGER ONLY)

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter Manager combination and **hold down last digit of combination** until the lock signals with two sets of double beeps.
2. **Press 3.** Lock signals once.
3. User and combination are removed from lock. (Add User feature is still available.)
4. If a mistake is made wait thirty (30) seconds and repeat steps **1 - 3.**

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid combinations starts a five (5) minute delay period.
 - LED flashes red at ten (10) second intervals.
- At the end of the delay period, two more consecutive invalid combinations will restart the five (5) minute delay period.

BATTERY LOW WARNING

- Repeated LED flashing and beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt alkaline battery only. (Example: Duracell™ or Energizer™ alkaline batteries.) It is recommended that batteries be replaced at least once annually.
- **Lock contains a non-volatile memory; even with the batteries removed the lock will retain all programming.**

For battery replacement instructions, see input unit's "User Operation" Guide.

Mounting instructions available at www.kaba-mas.com.